


ASSEMBLY AND INSTALATION

## REVOLVER FILM LOADER

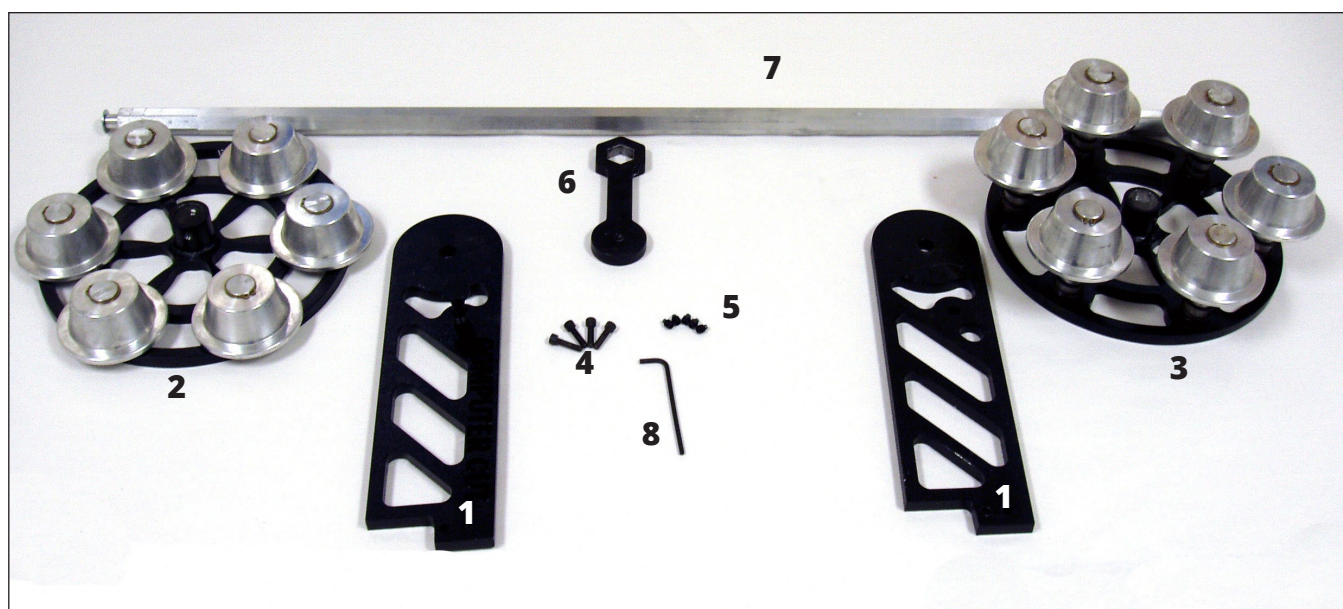

### PARTS LIST

- |                                 |                   |
|---------------------------------|-------------------|
| 1. 2 SUPPORT ARMS               | 5. 5 LOCKING NUTS |
| 2. 1 LEFT SPINDLE               | 6. 1 DOG BONE ARM |
| 3. 1 RIGHT SPINDLE WITH SPRINGS | 7. 1 SPINDLE ROD  |
| 4. 4 SUPPORT ARM SCREWS         | 8. 1 ALLEN WRENCH |



# REVOLVER FILM LOADER ASSEMBLY AND INSTALATION



ATTACH LEFT AND RIGHT SUPPORT  
ARMS TO THE PLOTTER WITH THE  
SUPPORT ARM SCREWS.

PLACE LEFT SPINDLE ON SPINDLE  
ARM. LEFT SPINDLE IS NOT  
SPRING LOADED.





SET LOCK NUT ON  
LEFT SPINDLE.




# REVOLVER FILM LOADER ASSEMBLY AND INSTALATION

ATTACH DOG BONE ARM  
TO SPINDLE ARM WITH THE  
COUNTERSINK FACING LEFT.  
THIS ACCESSORY IS USED FOR  
HOLDING ROLLS SMALLER THAN  
40" IN WIDTH. IF YOU DO NOT  
PLAN TO USE SMALLER ROLLS,  
YOU CAN SKIP THIS STEP.

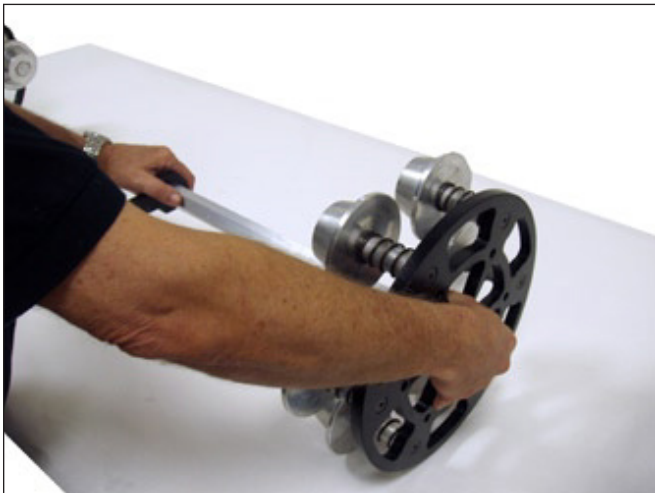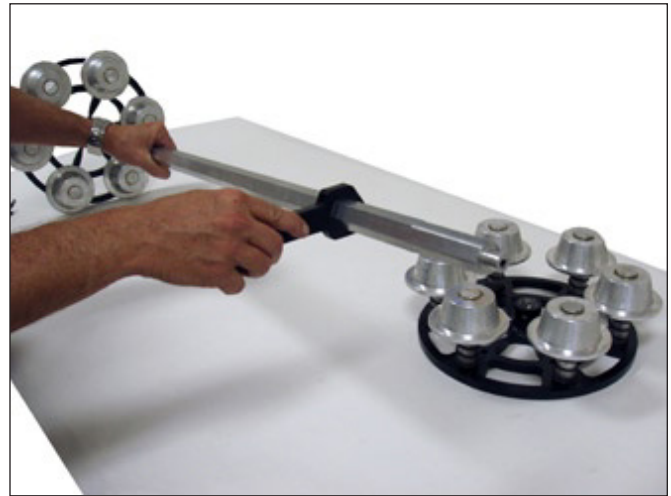


ADD RIGHT SPINDLE WITH  
SPRINGS AND TIGHTEN WITH  
LOCKING NUTS.

SET SPINDLES AND SPINDLE  
ROD SECTION IN HOLES ON  
SUPPORT ARMS.

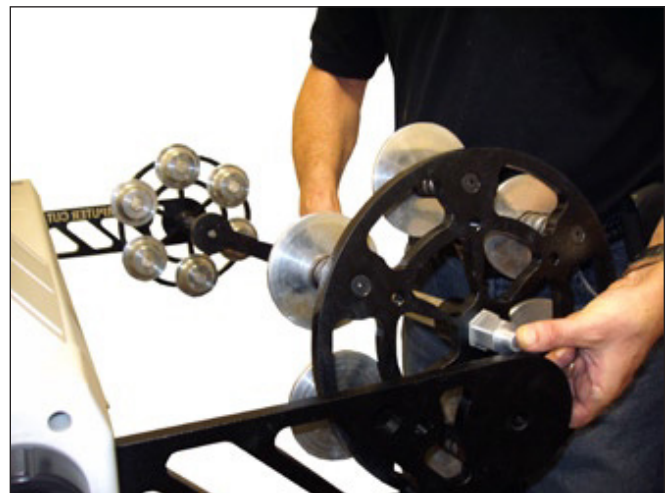

# REVOLVER FILM LOADER ASSEMBLY AND INSTALATION

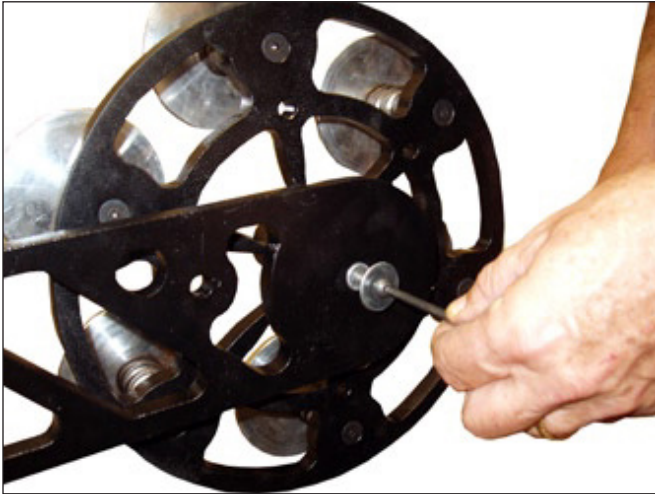

BOLT SPINDLE ROD TO  
BOTH THE LEFT AND RIGHT  
SUPPORT ARMS.

TO USE SMALLER ROLLS,  
REMOVE THE APPRORIATE CORE  
HOLDER AND ATTACH IT TO  
THE DOG BONE ARM.



LOAD SMALLER ROLLS ON THE  
MODIFIED HOLDER.





# REVOLVER FILM LOADER ASSEMBLY AND INSTALATION



LOAD ROLLS ON THE REMAINING  
ROLL HOLDERS.

